

## VALLEYS

Install a valley gutter (Pict. Nr. 1) in correspondence of the valley (Pict. Nr. 3). The valley gutter has to be installed before marking the roof.


At 10cm (4") from the center line of the valley apply a line of Bitustik mastic (Pict. Nr. 3).

Install the shingles as to former indications and cut them at the center of the valley so (Pict. Nr. 4) that the cutting side meets the central fold of the valley (Pict. Nr. 2).

Seal the joint between shingles and valley with a line of Bitustik mastic (Pict. Nr. 2-4).

Nails should not be used within at least 30 cm (12") of the center line.


Picture Nr. 1 - Flashing (example)

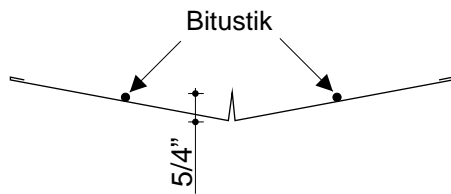

Picture Nr. 2 - Flashing (example)



Picture Nr. 3 - Installation of the valley

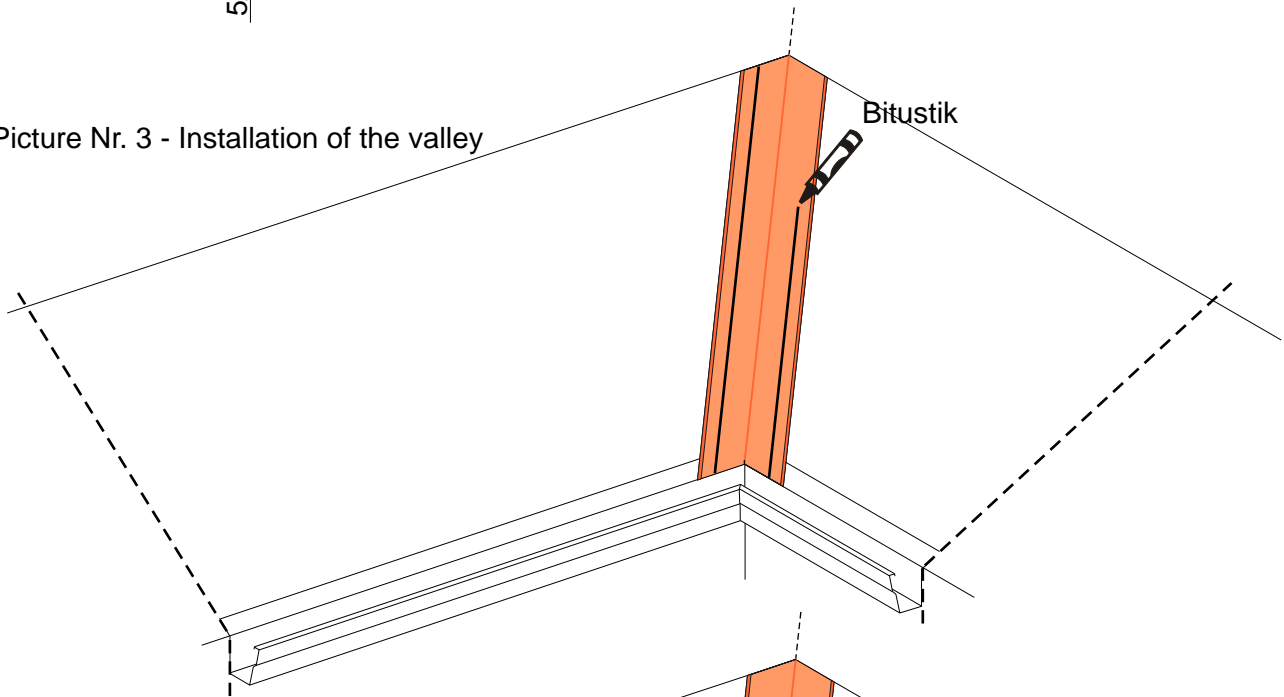

Picture Nr. 4 - Installation of the shingles

